




Application Note 10 **3 Series Mounting Collar**

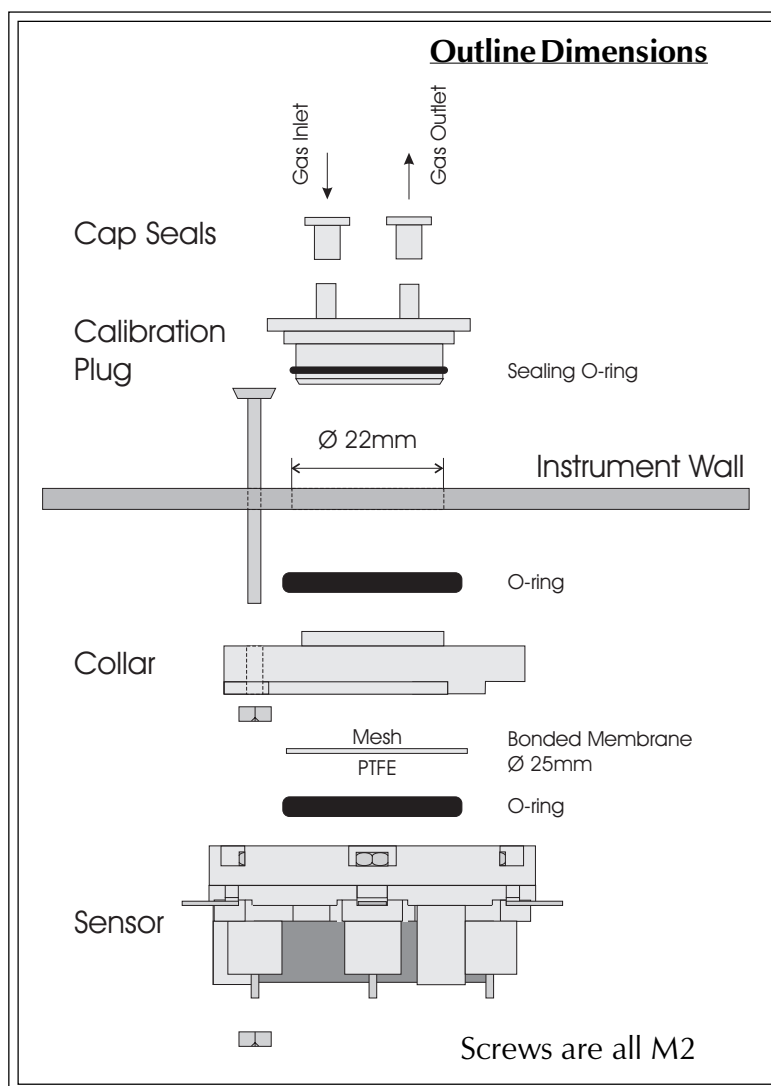

A diffusion mounting assembly, known as a 'collar', has been designed to mount the 3 Series CiTiceL inside the case of an instrument with a suitable opening in the wall for gas access. This enables the protective filter membrane to be mounted against the CiTiceL. It also incorporated a push-in zero/calibration 'plug'. With the connector pipe seals in place, a zero background gas measurement can be made. With the connector pipe seals removed, a suitable calibration gas can be passed across the sensor from a cylinder.

Order Code: Mounting Collar.....B010